



## ENGINE CRADLE ASSEMBLY INSTRUCTIONS

- 1.** Loosely assemble the cradle with the bolts supplied.
- 2.** Ensure that you do NOT tighten the bolts 100% as this may cause the cradle to not line up properly with the mounting points on your engine.
- 3.** Position your engine into the engine cradle lining up the mounting points, secure with the bolts supplied along front rail.
- 4.** Finally, finish tightening the engine mounting bolts.
- 5.** Once fitted, then tighten the cradle bolts .

Following these simple steps will assist in the cradle lining up correctly to your engines mounting points and correct trouble free use of the cradle.